

快速入门手册

RF02-LC 机架式媒体平台（轻量版）

(V1.0)




通过本手册，您可以了解到

- 设备清单
- 设备接口和按键功能
- 设备安装与网络连接
- LCD 状态查看与基本操作
- Web 管理、固件升级及恢复出厂设置


在您正式使用本产品之前，建议您仔细阅读本产品使用说明。为确保您的人身安全并避免设备受到物理或电气损伤，请严格按照本手册指导，或在专业人员指导下安装和使用本产品。不正确的电气连接或物理安装方式可能造成设备永久损坏，甚至威胁人身安全。

1 设备清单


标准配件




(1) RF02-LC 主机箱 × 1

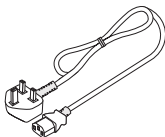

(2) 电源线 × 2

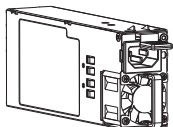


(3) 可热插拔电源 × 2




(4) 机架安装耳×2



(5) 安装耳固定螺丝（若干）

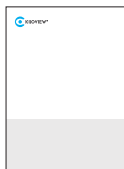

(6) 《快速入门》手册× 1



(7) 合格证 / 保修卡 × 1

选配件



选配：主控卡 × 1




说明


RF02-LC 主控卡为选配件，根据用户需求购买，默认不带

2 设备接口

前面板

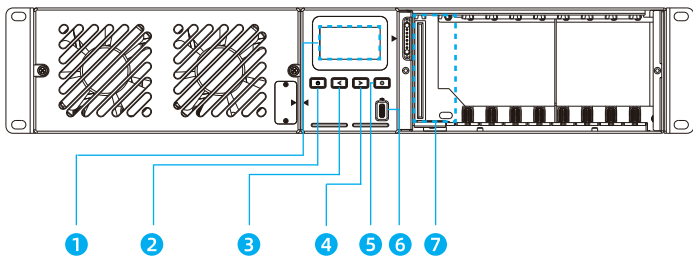

后面板

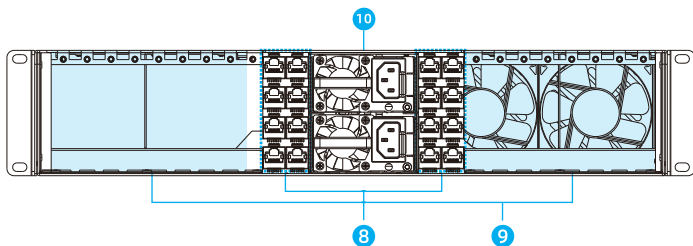

- | | |
|-------------|---------------------|
| (1) LCD屏 | (6) USB Type-C 接口 |
| (2) 开机/关机按键 | (7) 主控卡槽位 |
| (3) 上一步按键 | (8) 16 × RJ45 以太网接口 |
| (4) 下一步按键 | (9) 16 × 业务板卡槽位 |
| (5) 确认按键 | (10) 双电源模块 |

3 按键说明


按键	按键功能
开关机	按 0.5 秒开机；按 2 秒关机
上一步	在设备页面及设置项中向上切换
下一步	在设备页面及设置项中向下切换
确认	确认当前选择或进入对应功能

说明

RF02-LC 后面板提供 16 个机箱固定 RJ45 以太网接口，接口实际支持的网络速率由所安装业务板卡的网络能力决定。


4 设备安装

4.1 拆卸前面板（风扇板）

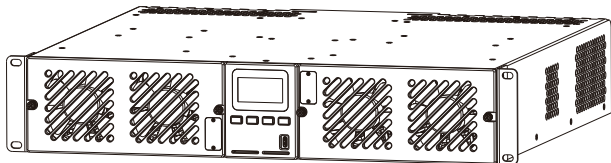

(RF02-LC 全貌图)

首先拧开前面板两侧的松不脱螺丝。建议将设备放置于桌面边缘，预留足够空间，以便将前面板向外抽出。

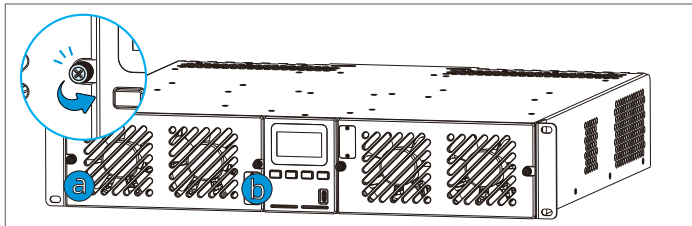

松开螺丝后，将前面板（风扇板）平稳向外抽出并放置于安全位置，即可进行业务板卡或主控卡安装。



注意


- 前面板同时为设备风扇板，请轻拿轻放，避免碰撞或损坏。
- 前面板拆下后，请避免异物进入机箱内部。

4.2 安装业务板卡

RF02-LC 支持根据实际业务需求安装不同类型的业务板卡。


步骤 1：拆卸前面板

按照 4.1 拆卸前面板（风扇板）的操作方式，将前面板拆下。

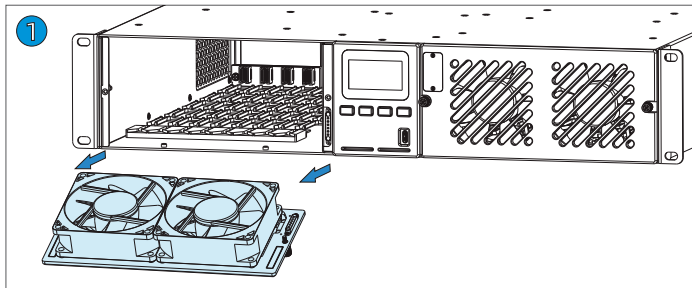

步骤 2：安装对应挡板

在 RF02-LC 后面板安装与该业务板卡对应的挡板，并拧紧固定螺丝。

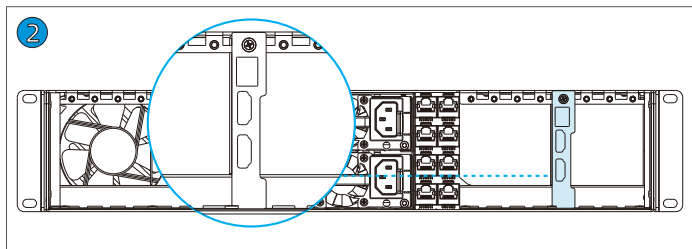


说明

RF02-LC 支持多种业务板卡扩展。不同业务板卡的接口及功能可能有所不同，具体请参考对应业务板卡的《快速入门》或产品说明。

步骤 3：解锁业务板卡


将业务板卡上的金属卡扣向右拨动，再向下拨动，使卡扣处于解锁状态。

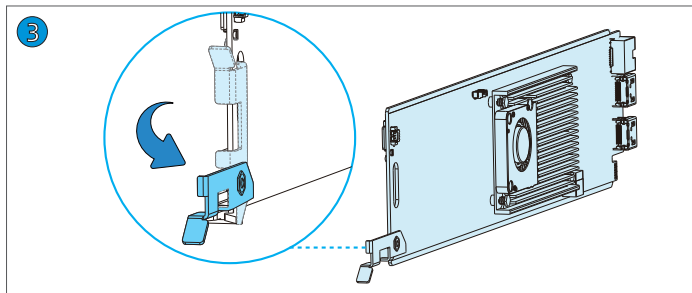

步骤 4：插入业务板卡

将业务板卡与对应卡槽正确对齐，保持板卡水平，并平稳推入卡槽到底。

将金属卡扣向上拨动，再向左拨动完成锁紧，确保业务板卡安装并固定到位。

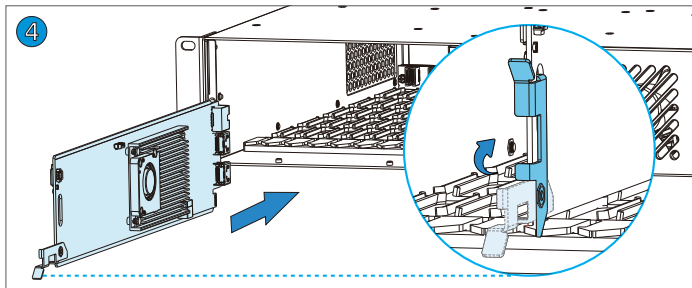

注意


插入板卡时请确认板卡方向正确，请勿强行插入，以免损坏板卡或机箱连接器。

4.3 安装主控卡（选配）

RF02-LC 主控卡为选配件。


如设备配置主控卡，请先按照 4.1 拆卸前面板（风扇板）的操作方式，将前面板拆下。

先在设备后面板安装与主控卡对应的挡板，并拧紧固定螺丝。

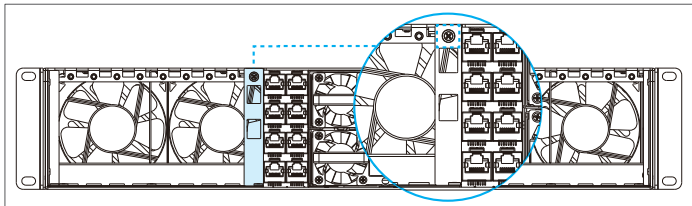

在机箱内部找到标有“Main Control Card”的专用槽位。

将主控卡与槽位正确对齐后平稳推入，直至主控卡安装到位并固定。

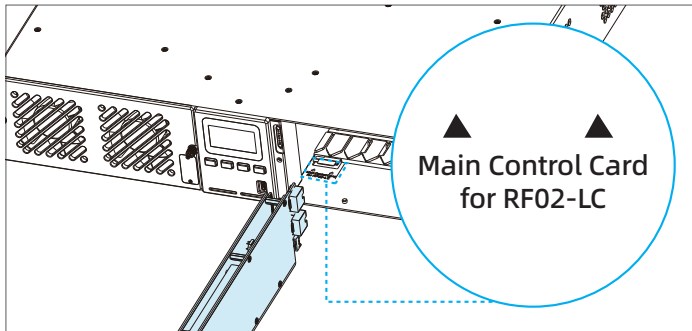

安装主控卡后，RF02-LC 可通过 Web 管理平台进行设备及业务卡的集中管理。



注意


主控卡必须安装在标有 Main Control Card 的专用槽位中，请勿插入业务卡槽位。

4.4 安装前面板（风扇板）

完成业务板卡和主控卡安装后，需要将前面板（风扇板）重新安装到机箱。

安装前，请确认前面板（风扇板）与机箱上的箭头标识方向一致。

两个箭头标识对齐后，将前面板（风扇板）平稳推入机箱，直至安装到位。

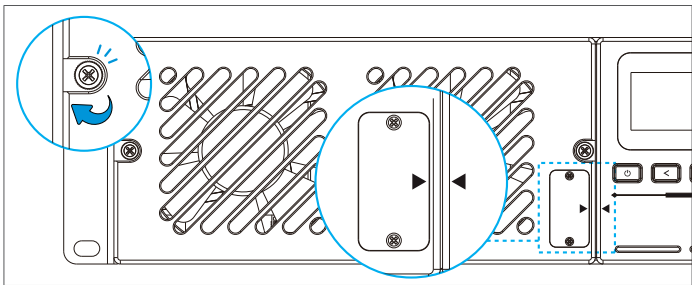

安装到位后，拧紧前面板两侧的松不脱螺丝，完成前面板安装。



注意

- 前面板（风扇板）与机箱上的两个箭头标识必须对齐。
- 若箭头未对齐，前面板将无法正常工作，请勿强行推入，以免损坏设备。
- 完成板卡安装后，请尽快装回前面板，避免灰尘或其他异物进入机箱。


4.5 电源安装

RF02-LC 标配双冗余热插拔电源。

安装前，请按照电源模块上的防呆标识确认插入方向，并将电源模块与机箱电源槽正确对齐。

确认方向正确后，将电源模块平稳推入，直至听到“咔哒”声，表示电源模块已经安装到位。

完成两个电源模块安装后，分别连接电源线即可为设备供电。

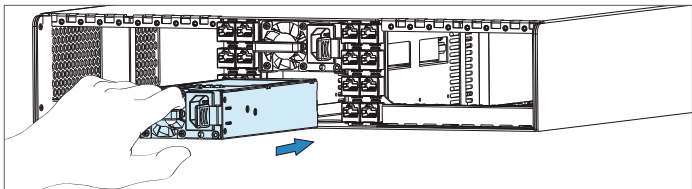


注意

请按照防呆标识指示方向安装电源模块，请勿强行插入。

4.6 电源拆卸


拆卸电源前，请先拔出对应电源线。

按住电源模块上的释放卡扣，同时握住电源模块拉手，将电源模块平稳向外抽出。

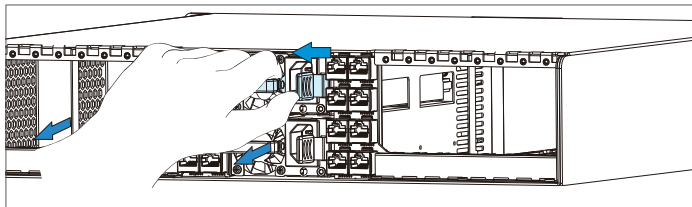

4.7 设备开机和关机

完成设备安装并连接电源后，长按开机 / 关机按键 **0.5 秒**，LCD 屏幕点亮，表示 RF02-LC 正在启动。

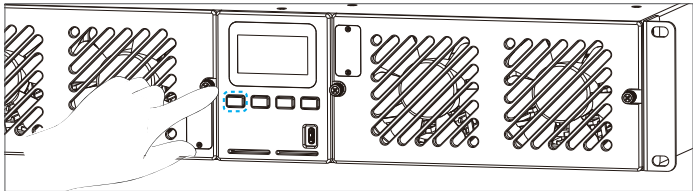

设备启动完成后，LCD 将进入首页。

如需关闭设备，长按开机 / 关机按键 **2 秒**，等待设备停止运行并关闭屏幕，即表示关机完成。

5 网络接入说明


RF02-LC 后面板提供 16 个机箱固定 RJ45 以太网接口，每个接口对应一个业务卡槽位。接口实际支持的网络速率由对应业务卡的网络能力决定。

安装主控卡后，可通过主控卡网络接口接入管理网络，并通过 Web 管理平台对 RF02-LC 及业务卡进行集中管理。

5.1 主控卡网络接入说明

主控卡提供 2 个 5GbE 网络接口。

- 日常管理场景下，连接其中任意 1 个网口即可正常使用。
- 当两个网口同时连接时，系统默认通过 Network 1 建立 KiloLink 管理连接。
- 主控卡与需要管理的业务卡必须处于同一个二层网络中，才能正常完成设备发现和管理。

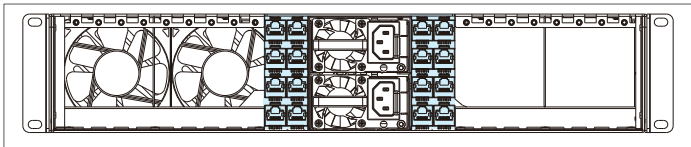

如网络环境中存在 VLAN、双网口接入、网络隔离或多交换机级联等复杂组网场景，请在部署前确认主控卡与业务卡之间具备二层网络连通性。



说明

如主控卡与业务卡之间存在路由、不同 VLAN、三层网络隔离或其他网络隔离策略，可能导致业务卡无法被正常发现和管理。

在复杂网络环境中，请在部署前确认主控卡与业务卡之间具备二层网络连通性。

6 查看设备当前状态

RF02-LC 配备 LCD 屏幕，可直接查看机箱及业务板卡的基本运行状态。

设备启动后进入 LCD 首页，可查看：

- 已安装业务板卡数量 / 总槽位数量
- 异常板卡数量
- 主控卡安装状态
- 网络状态及 IP 地址

当主控卡已安装时，LCD 首页显示主控卡已安装状态，并显示对应网络接口的 IP 地址或网络状态。


当未安装主控卡时，LCD 首页显示主控卡未安装状态，不显示有效的主控卡网络 IP 信息。



RF02-LC LCD 还支持切换至板卡列表页面，查看各槽位业务板卡的基本状态信息。



LCD 同时提供基础设备设置功能，可根据需要进入设置页面进行相关操作。

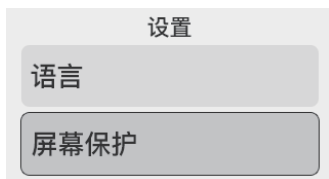

说明

LCD 主要用于查看板卡状态、进行计算卡开关机操作以及 RF02-LC 基础功能设置。更完整的设备及业务管理功能需安装主控卡后通过 Web 管理平台完成。

7 Web设备管理

安装主控卡后，RF02-LC 支持通过 Web 管理平台进行设备及业务板卡的集中管理。

7.1 登录 Web 管理界面

- 1.请确保电脑与 RF02-LC 主控卡处于同一 IP 网段。
- 2.在 LCD 首页查看主控卡的 IP 地址。
- 3.打开浏览器，在地址栏输入：http://设备IP地址/
- 4.输入默认登录信息：用户名：admin，密码：admin

7.2 Web 管理核心功能

登录后，可通过 Web 管理平台：

- 查看 RF02-LC 及业务板卡运行状态；
- 管理业务板卡；
- 配置设备相关功能；
- 进行主控卡固件升级及恢复出厂等操作。



说明

详细功能操作请参考 RF02-LC 用户手册。


8 恢复出厂设置(本功能需要安装主控卡)

如需恢复主控卡出厂设置，请登录 RF02-LC Web 管理平台，在系统设置中执行恢复出厂操作。

恢复后，主控卡相关配置将恢复至默认状态，默认登录用户名和密码恢复为：

●用户名：admin

●密码：admin

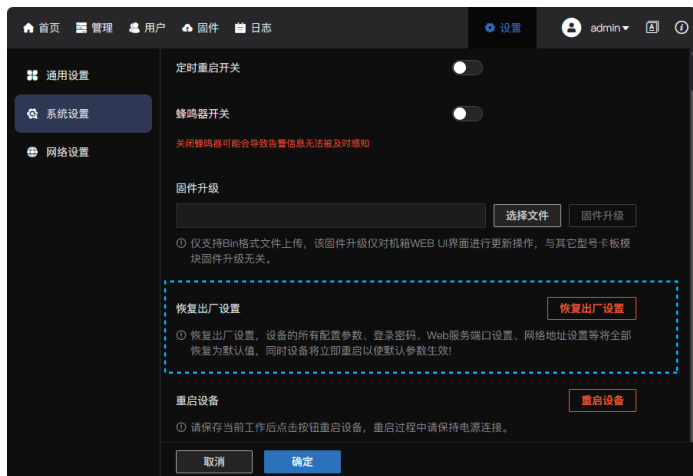

注意

恢复主控卡出厂设置前，请确认重要配置已经备份。

9 软件及固件升级

RF02-LC 前面板软件和主控卡固件支持不同的升级方式。

- 已安装主控卡时：通过 RF02-LC Web 管理平台升级主控卡固件，前面板软件将随主控卡固件一并升级，无需单独升级。
- 未安装主控卡时：前面板软件仍可通过前面板 USB Type-C 接口连接 U 盘进行独立升级。

9.1 前面板软件升级

当 RF02-LC **未安装主控卡**时，可通过 U 盘单独升级前面板软件。

步骤 1：准备 U 盘

准备普通 U 盘，并将其格式化为 FAT32 文件系统。不支持 NTFS 或 exFAT 格式。

步骤 2：准备升级文件


获取官方提供的前面板升级文件：RF-LC.bin。将 RF-LC.bin 放置在 U 盘根目录，请勿放入任何文件夹中。

步骤 3：开始升级

设备正常开机后，将 U 盘连接至 RF02-LC 前面板的 **USB Type-C 接口**。

设备检测到有效升级文件后，将自动开始升级。

升级完成后，设备将自动重启。

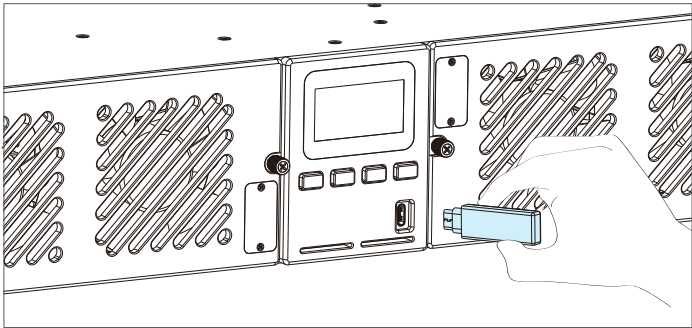

9.2 主控卡固件升级

本功能需要安装主控卡。主控卡固件通过 RF02-LC Web 管理平台进行升级。

升级主控卡固件时，前面板软件将随主控卡固件一并升级，用户无需再单独进行前面板软件升级。

请访问 Kiloview 官方网站支持与下载页面，选择 RF02-LC，下载对应的主控卡固件。

登录 RF02-LC Web 管理平台，进入固件升级页面：

1. 选择对应的主控卡固件文件；
2. 上传固件；
3. 点击“固件升级”；
4. 按照页面提示完成升级。



升级完成后，设备可能自动重启，请耐心等待设备恢复正常运行。

注意

- 主控卡固件升级时，前面板软件将自动同步升级。
 - 升级过程中请勿断开设备电源。
 - 请确认上传的固件型号及版本与 RF02-LC 主控卡匹配。
 - 未安装主控卡时，无法通过 Web 进行主控卡固件升级。
-

10 注意事项

机箱摆放

- RF02-LC 通过机箱风道进行散热，设备安装和使用过程中请勿遮挡通风口。
 - 请勿在机箱顶部堆放重物，以免机箱变形导致板卡插拔困难。
 - 安装到机柜时，应预留足够空间以保证设备正常散热。
 - RF02-LC 安装到机架时，机箱底部必须有可靠支撑，不可悬空安装。
 - 请使用机架托盘、层板或其他支撑结构，使机箱保持水平并均匀受力。
-

LCD 屏幕保护

- 定期清洁 LCD 屏幕，避免强光长期直射或受到物理撞击。
 - 避免屏幕长时间保持同一静态画面，以延长屏幕使用寿命。
-

防静电提示

- 建议机房铺设防静电地板或防静电垫，减少静电积累。
 - 安装、拆卸或运输业务板卡时，应做好防静电措施。
 - 运输和存储板卡时建议使用防静电袋或防静电包装材料。
-

其他注意事项

- 打开设备前面板进行板卡安装或维护时，请避免异物进入机箱内部。
 - 完成板卡安装后，请及时关闭并固定前面板。
 - 如设备长期不使用，建议断开设备电源并妥善存放。
 - 安装或拆卸板卡时请保持板卡水平，切勿强行插拔。
-

11 免责声明

请按照本手册要求安装、操作和维护 RF02-LC。

因未按照操作说明使用、擅自改装、使用非官方或错误固件、升级过程中断电、第三方软硬件兼容性、网络环境或其他非产品本身原因导致的设备损坏、数据丢失或其他损失，我方不承担相关责任。

产品功能可能随软件或固件版本更新而调整，请以实际设备及最新官方资料为准。

本手册及相关技术资料知识产权归相应权利人所有。

如遇无法解决的问题，请联系 Kiloview 技术支持。



长沙千视电子科技有限公司

联系电话：+86-18573192787

网址：<https://www.kiloview.com>

邮箱：support@kiloview.com

地址：湖南省长沙市雨花区汇金路 877 号嘉华智谷产业园长沙屿 B1-101/102 号

Quick Start Guide

RF02-LC Rack-Mount Media Platform (Lite Version)

(V1.0)



This Quick Start Guide will help you learn about:

- Packing List
- Device Interfaces and Button Functions
- Device Installation and Network Connection
- LCD Status and Basic Operations
- Web Management, Firmware Upgrade, and Factory Reset


Before using this product, please read this guide carefully. To ensure personal safety and prevent physical or electrical damage to the device, install and operate the product strictly in accordance with the instructions in this guide or under the supervision of qualified personnel. Improper electrical connections or physical installation may cause permanent damage to the device and may also pose a risk of personal injury.

1 Packing List


Standard Accessories




(1) RF02-LC Chassis × 1

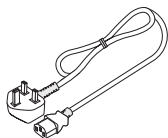

(2) Power Cord × 2

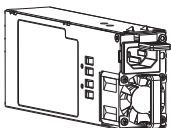


(3) Hot-swappable Power Supply × 2



(4) Rack Mount Ears × 2



(5) Rack Mounting Bracket Screws

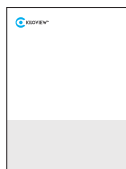

(6) Quick Start Guide × 1



(7) Certificate / Warranty Card × 1

Optional Accessory



(Optional) Main Control Card × 1




Note


The RF02-LC Main Control Card is an optional accessory and is not included by default. Purchase it separately as required.

2 Device Interfaces

Front Panel

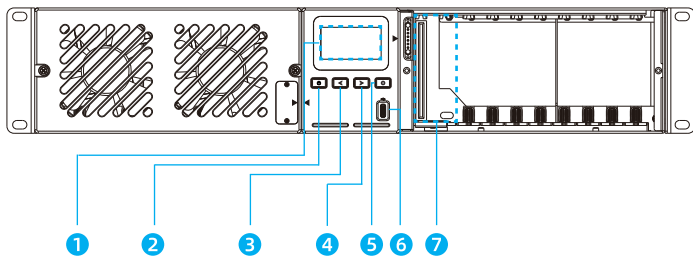

Rear Panel

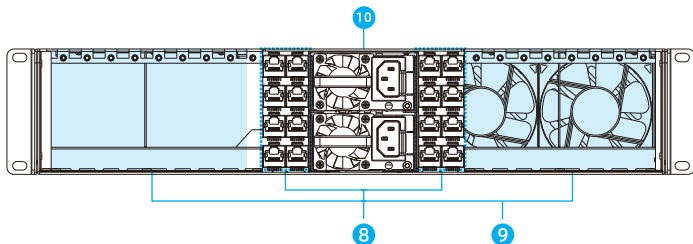

(1) LCD Screen

(2) Power On/Off Button

(3) Previous Button

(4) Next Button

(5) Confirm Button

(6) USB Type-C Port

(7) Main Control Card Slot

(8) 16 × RJ45 Ethernet Ports

(9) 16 × Function Card Slots

(10) Dual Power Supply Modules

3 Button Functions

Button	Function
Power On/Off	Press and hold for 0.5 seconds to power on; press and hold for 2 seconds to power off
Previous	Navigate upward through device pages or setting options
Next	Navigate downward through device pages or setting options
Confirm	Confirm the current selection or enter the selected function




Note

RF02-LC provides 16 chassis-integrated RJ45 Ethernet ports. The actual network speed supported by each port depends on the capabilities of the installed function card.

4 Device Installation


4.1 Removing the Front Panel (Fan Assembly)

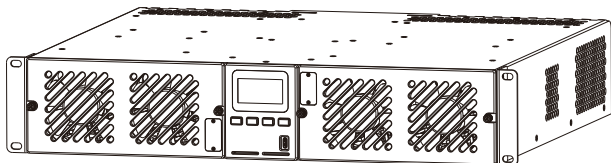

(RF02-LC Overview)

Loosen the captive screws on both sides of the front panel.

It is recommended to place the device near the edge of a work surface and leave sufficient clearance in front of the chassis so that the front panel can be pulled out easily.

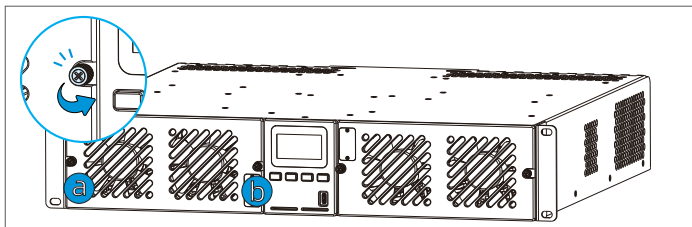

After loosening the screws, gently pull the front panel (fan assembly) straight out and place it in a safe location. You can then install the function cards or Main Control Card.



Caution


The front panel also serves as the device's fan assembly. Handle it carefully to avoid impact or damage. After removing the front panel, prevent foreign objects from entering the chassis.

4.2 Installing a Function Card

RF02-LC supports different types of function cards for various application requirements.


Step 1: Remove the Front Panel

Follow the procedure in **4.1 Removing the Front Panel (Fan Assembly)** to remove the front panel.

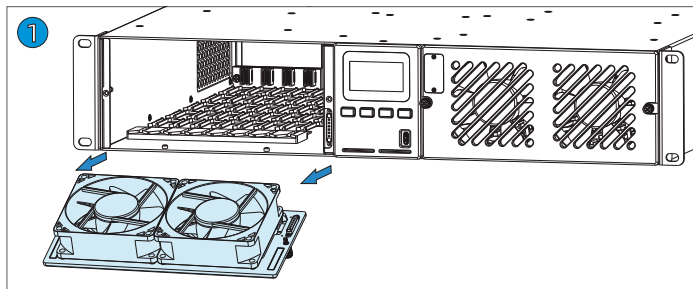

Step 2: Install the Corresponding Rear Bracket

Install the rear bracket corresponding to the function card at the appropriate position on the RF02-LC rear panel, and tighten the retaining screws.

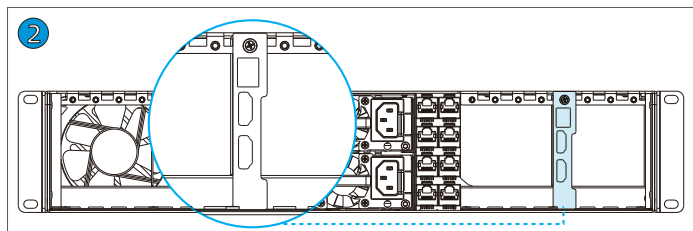


Note

RF02-LC supports multiple types of function cards. Interfaces and functions may vary by card model. For details, refer to the Quick Start Guide or product documentation supplied with the corresponding function card.

Step 3: Unlock the Function Card


Move the metal latch on the function card to the right, then downward, to place it in the unlocked position.

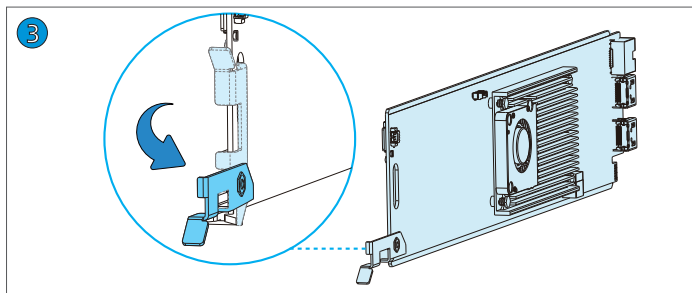

Step 4: Insert the Function Card

Align the function card with the corresponding slot. Keep the card level and gently slide it into the slot until it is fully seated.

Move the metal latch upward and then to the left to lock the card securely in place.

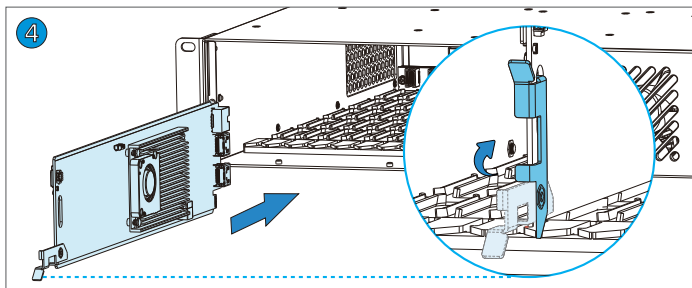



Caution


Check the card orientation. Do not force it into the slot.

4.3 Installing the Main Control Card (Optional)

The RF02-LC Main Control Card is an optional accessory.


If your device is equipped with a Main Control Card, first remove the front panel by following the instructions in 4.1 Removing the Front Panel (Fan Assembly).

Install the corresponding rear bracket on the rear panel and tighten the retaining screws.

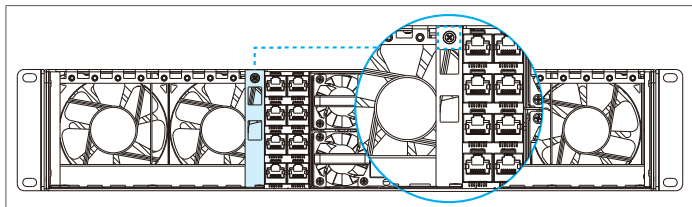

Locate the dedicated slot marked "Main Control Card" inside the chassis.

Align the Main Control Card with the slot and gently slide it in until it is fully seated and securely installed.

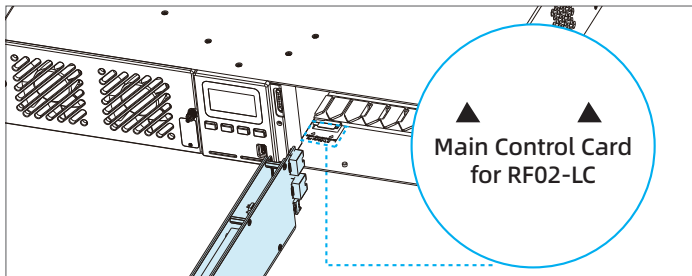

After the Main Control Card is installed, RF02-LC can centrally manage the chassis and function cards through the Web management interface.

 Caution


The Main Control Card must be installed in the dedicated slot marked Main Control Card. Do not insert it into a function card slot.

4.4 Reinstalling the Front Panel (Fan Assembly)

After installing the function cards and Main Control Card, reinstall the front panel (fan assembly).

Before installation, verify that the arrow marks on the front panel and chassis are aligned in the same direction.

Once the two arrow marks are aligned, gently slide the front panel into the chassis until it is fully seated.

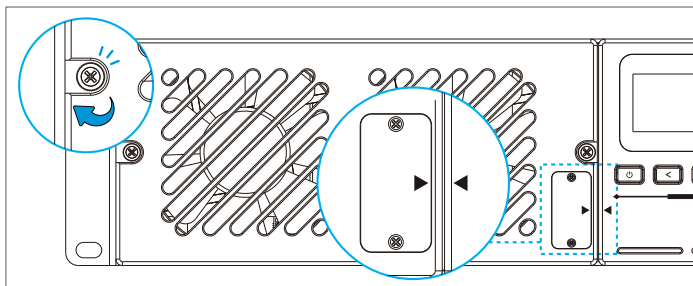

After the panel is fully seated, tighten the captive screws on both sides to secure it.




Caution

- The two arrow marks on the front panel (fan assembly) and chassis must be aligned.
 - If the arrow marks are not aligned, the front panel cannot be installed correctly. Do not force it into the chassis, as this may damage the device.
 - Reinstall the front panel promptly after card installation to prevent dust or other foreign objects from entering the chassis.
-

4.5 Installing the Power Supply Modules

RF02-LC includes two redundant hot-swappable power supply modules.

1. Check the orientation mark and align the module with the power supply bay.
2. Slide the module in until it clicks into place.
3. Install both modules, then connect the power cords.

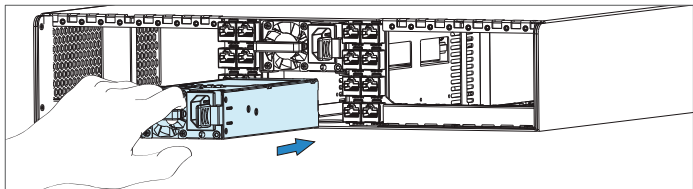


Caution

Follow the orientation mark. Do not force the module into the chassis.


4.6 Removing a Power Supply Module

1. Disconnect the power cord.
2. Hold the release latch and pull the module out using the handle.

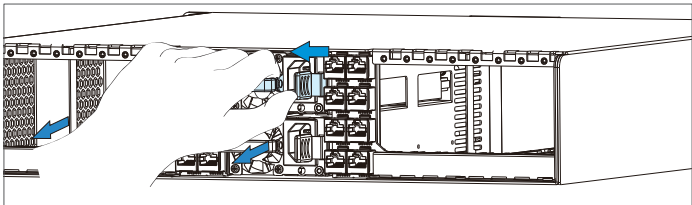

4.7 Powering the Device On and Off

After device installation is complete and power is connected, press and hold the Power On/Off button for **0.5 seconds**. The LCD screen will illuminate, indicating that RF02-LC is starting.

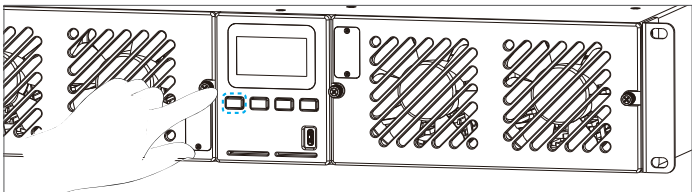

5 Network Connection

RF02-LC provides 16 chassis-integrated RJ45 Ethernet ports on the rear panel, with each port corresponding to a function card slot. The actual network speed supported by each port depends on the capabilities of the installed function card.

When a Main Control Card is installed, its network interfaces can be used to connect RF02-LC to the management network and centrally manage the chassis and installed function cards through the Web interface.

5.1 Main Control Card Network Connection

The Main Control Card provides two 5GbE network interfaces.


- For normal management, connecting either one of the two ports is sufficient.
- When both ports are connected, the system uses Network 1 by default for KiloLink management.
- The Main Control Card and the function cards to be managed must be on the same Layer 2 network for proper discovery and management.



Caution

Routing, different VLANs, Layer 3 isolation, or other network isolation policies between the Main Control Card and function cards may prevent the cards from being discovered or managed correctly.

In complex network environments, verify Layer 2 connectivity between the Main Control Card and function cards before deployment.


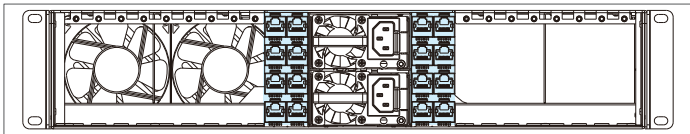


6 Checking Device Status


The LCD displays basic chassis and function card status.

After startup, the home screen shows:


- Number of installed function cards / total number of slots
- Number of abnormal cards
- Main Control Card installation status
- Network status and IP address

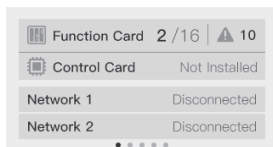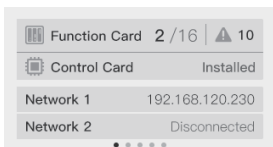

- Main Control Card installed: Displays card status and network information.
- Main Control Card not installed: Displays Not Installed.
- Card List: Displays the basic status of installed function cards.

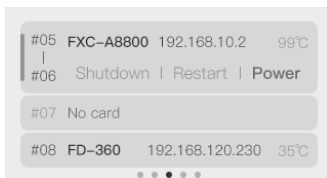

The LCD also provides basic device settings. Enter the Settings page as needed to configure the available options.

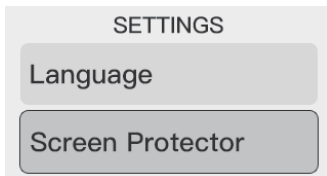

Note

The LCD is primarily used to view card status, power compute cards on or off, and configure basic RF02-LC settings. More comprehensive device and function card management requires a Main Control Card and is performed through the Web management interface.

7 Web-Based Device Management

After the Main Control Card is installed, RF02-LC supports centralized management of the chassis and installed function cards through the Web management interface.

7.1 Logging In to the Web Management Interface

- 1.Ensure that your computer and the RF02-LC Main Control Card are on the same IP subnet.
- 2.Check the IP address of the Main Control Card on the LCD home screen.
- 3.Open a Web browser and enter the following address:http://[Device IP Address]/
- 4.Enter the default login credentials:Username: admin>Password: admin

7.2 Core Web Management Functions

After logging in, you can use the Web management interface to:


- View the operating status of RF02-LC and installed function cards;
- Manage function cards;
- Configure device-related functions;
- Upgrade the Main Control Card firmware and perform a factory reset.

8 Factory Reset(A Main Control Card is required for this function)

To restore the Main Control Card to factory settings, log in to the RF02-LC Web management interface and perform the factory reset from System Settings.

After the reset, the Main Control Card settings will be restored to their default values. The default login credentials will be:

- Username: admin
- Password: admin

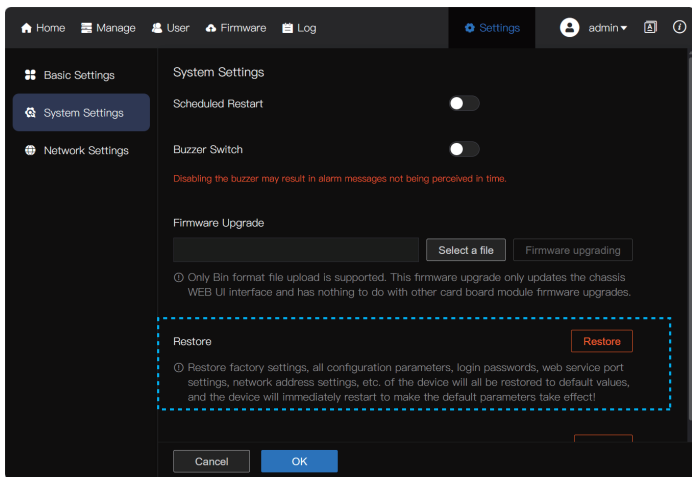

Caution

Back up any important configuration before performing a factory reset on the Main Control Card.

9 Software and Firmware Upgrade

RF02-LC supports different upgrade methods for the front panel software and Main Control Card firmware.

- When a Main Control Card is installed: Upgrade the Main Control Card firmware through the RF02-LC Web management interface. The front panel software will be upgraded automatically at the same time, so no separate upgrade is required.
- When no Main Control Card is installed: The front panel software can still be upgraded separately using a USB flash drive through the front panel USB Type-C port.

9.1 Front Panel Software Upgrade

When no Main Control Card is installed, the front panel software can be upgraded separately using a USB flash drive.

Step 1: Prepare the USB Flash Drive


Prepare a standard USB flash drive and format it using the FAT32 file system.

NTFS and exFAT file systems are not supported.

Step 2: Prepare the Upgrade File

Obtain the official front panel upgrade file: RF-LC.bin

Copy RF-LC.bin to the root directory of the USB flash drive. Do not place it inside any folder.

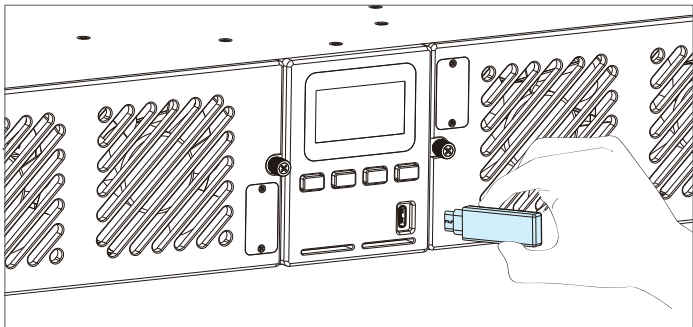

Step 3: Start the Upgrade

With the device powered on and operating normally, connect the USB flash drive to the USB Type-C port on the RF02-LC front panel.

Once the device detects a valid upgrade file, the upgrade will start automatically.

The device will automatically restart after the upgrade is complete.

Step 4: Verify the Upgrade

After the device has restarted, remove the USB flash drive.

Open the LCD Settings page and check the current software version to confirm that it has been updated to the target version.

9.2 Main Control Card Firmware Upgrade

A Main Control Card must be installed to use this function. The Main Control Card firmware is upgraded through the RF02-LC Web management interface.


During the Main Control Card firmware upgrade, the front panel software is upgraded automatically at the same time. No separate front panel software upgrade is required.

Visit the Kiloview Support & Download page, select **RF02-LC**, and download the corresponding Main Control Card firmware.

Log in to the RF02-LC Web management interface and open the firmware upgrade page:

1. Select the appropriate Main Control Card firmware file;
2. Upload the firmware file;
3. Click Firmware Upgrade;
4. Follow the on-screen instructions to complete the upgrade.

The device may restart automatically after the upgrade. Wait until normal operation is restored.

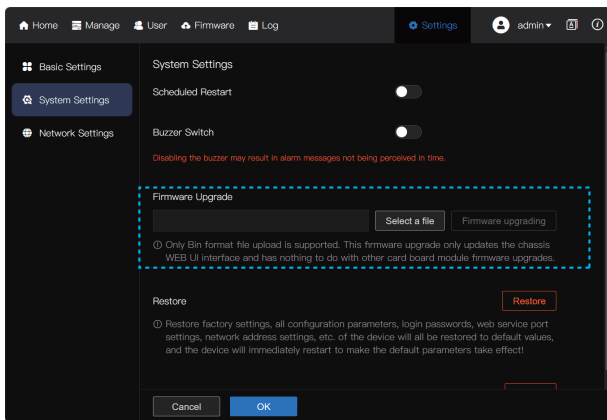

10 Important Notes



Chassis Placement

- RF02-LC uses front-to-rear airflow for cooling. Do not block the ventilation openings during installation or operation.
 - Do not place heavy objects on top of the chassis, as this may deform the chassis and make card insertion or removal difficult.
 - When installing the device in a rack, leave sufficient clearance for proper ventilation.
 - When installed in a rack, the bottom of the RF02-LC chassis must be properly supported. Do not install the chassis in a suspended configuration.
 - Use a rack shelf, tray, or other suitable support structure to keep the chassis level and distribute its weight evenly.
-



LCD Screen Care

- Clean the LCD screen regularly and avoid prolonged exposure to direct strong light or physical impact.
 - Avoid displaying the same static image for extended periods to help extend the life of the LCD screen.
-



ESD Precautions

- Use anti-static flooring or mats in the equipment room to reduce electrostatic buildup.
 - Use appropriate ESD protection when installing, removing, or transporting function cards.
 - Use anti-static bags or other ESD-safe packaging when transporting or storing cards.
-



General Precautions

- When the front panel is removed for card installation or maintenance, prevent foreign objects from entering the chassis.
 - Reinstall and secure the front panel promptly after card installation is complete.
 - If the device will not be used for an extended period, disconnect the power supply and store the device properly.
 - Keep cards level during installation or removal. Do not force them into or out of the chassis.
-

11 Disclaimer

Install, operate, and maintain RF02-LC in accordance with this guide.

Kiloview is not responsible for equipment damage, data loss, or other losses caused by improper operation, unauthorized modification, unofficial or incorrect firmware, power interruption during upgrades, third-party compatibility issues, network conditions, or other causes unrelated to the product itself.

Product features may change with software or firmware updates. Refer to the actual device and the latest official documentation.

Intellectual property rights for this guide and related technical materials belong to their respective rights holders.

Contact Kiloview Technical Support if further assistance is required.



Kiloview Electronics Co., Ltd.

Tel: +86-18573192787

Website: www.kiloview.com/en

Technical support Email: support@kiloview.com

Skype: [support@kiloview.com](https://www.skype.com/en/contacts/people/s/support@kiloview.com)

WhatsApp: +86-18573195156/18573195256

Address: B1-101/102, Jiahua Intelligence Valley Industrial Park, 877 Hujin Road,
Yuhua District, Changsha, China